SONY

3-861-400-21 (1)

Active Speaker System

Operating Instructions

Before operating the unit, please read this manual thoroughly and retain it for future reference

Manual de instrucciones (dorso)

Antes de utilizar la unidad, lea este manual detenidamente y consérvelo para futuras referencias.

SRS-A45

Sony Corporation © 1997 Printed in Philippines

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.





This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner's Record

The model number is located on the front of the unit and the serial number is located inside the battery compartment. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No.SRS-A45


Features

The Sony SRS-A45 is a compact-size speaker system with a built-in power amplifier. This system can be connected to a Discman, WALKMAN* headphone

- The SURROUND function enables you to reproduce a wide sound field.
- The magnetically shielded speakers should have little effect on a TV screen or recorded tapes, etc. when placed close to them.
- MEGA BASS circuit enables you to obtain powerful bass, regardless of the sound volume.
- Power output of 5 W + 5 W
- The "dynamic sound duct" assures a rich and powerful bass.
- * WALKMAN is a registered trademark of Sony Corporation.

Power Sources

Using on house current

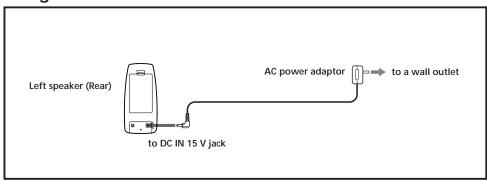

When you use the AC power adaptor, the AC power adaptor plug should not be facing down, as this could cause speaker noise and possibly damage the

When the AC power adaptor is connected to the system, internal batteries are automatically


Note on the AC power adaptor

Use only the supplied AC power adaptor. Do not use any other AC power adaptor.



Polarity of the plug

Battery installation

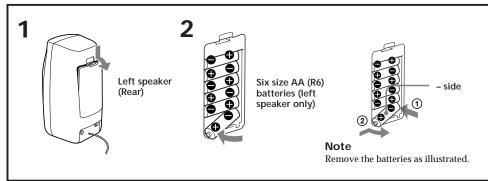

Battery replacement

When the batteries are weak, the POWER indicator will start flickering and become faint, or the playback sound will be distorted or unstable. In such a case, replace all the batteries with new ones. For battery life, see "Specifications".

Precautions

• Operate the system only on 9 V DC when using

For AC operation, use only the supplied AC power adaptor. Do not use any other AC power adaptor.

- After operating the system with the AC power adaptor, disconnect the AC power adaptor from the wall outlet if the system is not to be used for an extended period of time. The POWER switch on the system does not turn the AC power adaptor off.
- \bullet If the system is not to be used for a long period of time or is to be operated extensively on AC power, remove the batteries to avoid damage caused by battery leakage and corrosion.
- Do not open the cabinet. Refer servicing to qualified personnel only.
- Do not leave the system in a location near heat sources, or in a place subject to direct sunlight,
- excessive dust, moisture, rain or mechanical shock Should any solid object or liquid fall into the system, remove the batteries and have the system checked by qualified personnel before operating it any further.
- Do not use alcohol, benzine or thinner to clean the cabinet.
- Although this system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards or floppy disks using magnetic coding in front of the system for an extended period of time

If the TV picture or monitor display is magnetically distorted

Although this system is magnetically shielded, there may be cases that the picture on some TV sets/ personal computer sets may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer set once, and after 15 to 30 minutes turn it on again. For the personal computer set, take the appropriate measures such as data storage before turning it off.

When there seems to be no improvement, locate the system further away from the TV set/personal computer set. Furthermore, be sure not to place objects in which magnets are attached or used near the TV set/personal computer set, such as audio racks, TV stands, toys, etc. These may cause magnetic distortion to the picture due to their interaction with

If you have any questions or problems concerning your system that are not covered in this manual. please consult your nearest Sony dealer.

Specifications

5~W + 5~W, < 10%~T.H.D, 500 - 1~kHz,

4 ohms (when using the AC power adaptor)

Input impedance 4.7 kilohms (at 1 kHz)

Speaker section

Full-range bass reflex type Full-range (magnetically shielded): ø 65 mm (2 $^{5}/_{8}$ in.) Speaker unit

4 ohms Rated input power

8 W

General Power requirement

DC 15 V: supplied AC power adaptor DC 9 V: six size AA (R6) batteries (left

speaker only)

Input cord Inputs

left: stereo miniplug (1.0 m) right: monaural miniplug (1.0 m) Battery life (at 5 mW + 5 mW output)

Approx. 7 hours with Sony batteries

Approx. 17 hours with Sony alkaline batteries LR6 (SG)

Approx. $95 \times 205 \times 110$ mm (w/h/d)

 $(3^{3}/_{4} \times 8^{1}/_{8} \times 4^{3}/_{8} \text{ in.})$ Left speaker: Approx. 610 g (1 lb. 6 oz.) not incl. batteries

Right speaker: Approx. 500 g (1 lb. 2 oz.)

Supplied accessory AC power adaptor AC-S1510 (1)


Optional accessories Plug adaptor PC-236HG

Connecting cord RK-G138HG

Design and specifications are subject to change without

Mass

Connections

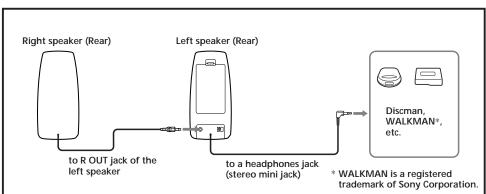


Connect the left speaker to the source equipment.

When the system is connected to a monaural jack of a radio, etc., the sound may only come through the left speaker. In such a case, use the optional Sony plug adaptor PC-236HG.

The sound will come through both speakers.

To connect to a stereo phone-type headphones jack Use the optional RK-G138HG connecting cord.

How to Use

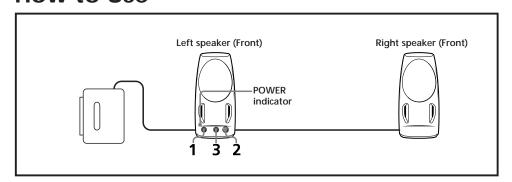

Press the POWER switch (_ ON). The POWER indicator lights up

Adjust the VOLUME control.

Press the SURROUND button (ON) to obtain the surround effect. As this system has an internal MEGA BASS

circuit, turn off the MEGA BASS (WALKMAN, Discman, etc.) function, which may cause sound distortion.

After listening, press the POWER switch (\square OFF). The POWER indicator goes off.

Español

ADVERTENCIA

Para evitar incendios o el riesgo de electrocución, no exponga la unidad a la lluvia ni a la humedad.

Para evitar descargas eléctricas, no abra la unidad. En caso de avería, solicite los servicios de personal cualificado.

Particularidades

El SRS-A45 es un sistema de altavoces compacto, tamaño bolsillo, con un amplificador de potencia incorporado. El sistema podrá conectarse a un Discman, un WALKMAN* de cascos auriculares, etc.

- La función de efecto perimétrico (SURROUND) le permitirá reproducir un campo acústico amplio.
- Los altavoces tienen blindado antimagnetismo y su presencia cerca de un televisor o de cintas grabadas no los afectará.
- · Circuito de refuerzo de graves (MEGA BASS), que le permitirá obtener graves potentes independientemente del volumen del sonido.
- Salida de potencia de 5 W + 5 W
- El "conducto de sonido dinámico" asegura graves ricos y potentes.
- * WALKMAN es marca registrada de Sony Corporation.

Precauciones

- Cuando utilice pilas, funcionará solamente con 9 V CC. Para alimentarlo con CA, utilice solamente el adaptador de alimentación de CA suministrado. No utilice ningún otro adaptador de alimentación de CA.
- Después de haber alimentado el sistema con el adaptador de alimentación de CA, desconecte éste de la toma de la red cuando no vaya a utilizar el sistema durante mucho tiempo. El interruptor POWER del altavoz izquierdo no desconectará el adaptador de alimentación de CA.
- Cuando no vaya a utilizar el sistema durante mucho tiempo, o cuando vaya a utilizarlo con alimentación de CA, extráigale las pilas para evitar el daño que podría causar el electrólito de las mismas
- No abra las cajas acústicas. En caso de avería solicite los servicios de personal cualificado.
- No deje el sistema cerca de fuentes térmicas, ni en lugares sometidos a la luz directa, polvo excesivo, humedad, lluvia, o choques.
- Si dentro del sistema cae algún objeto sólido o líquido, extráigale las pilas y haga que sea revisado por personal cualificado.
- No emplee alcohol, bencina, ni diluidor de pintura para limpiar las cajas acústicas.
- Aunque este sistema tiene un blindado antimagnetismo, no deje sus cintas grabadas, relojes, tarjetas de crédito o discos floppy con cintas o codificación magnética, delante del sistema durante largos períodos de tiempo.

Si la imagen del televisor o del monitor

Aunque este sistema tiene un blindado antimagnetismo, a veces la imagen de algunos aparatos de TV/monitor de computadora pueden verse distorsionadas por el magnetismo. En estos $\,$ casos, desconecte una vez el aparato de TV/computadora y vuelva a conectar después de 15 a 30 minutos. En el caso de la computadora, tome las precauciones del caso, para no perder datos importantes.

acerque objetos que contengan imanes cerca del aparato de TV/computadora, un mueble de audio o puede deberse a la combinación de estos imanes con

póngase en contacto con su proveedor Sony

Especificaciones

Sección del amplificador Salida de potencia 5 W + 8

5 W + 5 W, distorsión armónica

total del 10%,

500 Hz - 1 kHz, 4 ohmios (cuando utilice un adaptador de

Impedancia de entrada

4,7 kiloohmios (a 1 kHz)

Sección de los altavoces Sistema Tipo reflector de graves de gama completa

Gama completa (blindado Unidad de altavoz antimagnetismo): ø 65 mm

Impedancia nominal

4 ohmios Potencia nominal de entrada

Generales

 $15~\mathrm{V}$ CC: suministrada por el adaptador de alimentación de CA 9 V CC: seis pilas R6 (tamaño AA) (altavoz izquierdo solamente)

Cable de entrada Entradas

Izquierdo: miniclavija estéreo (1.0 m)

Derecho: miniclavija monoaural (1,0 m)

Duración de las pilas (a una salida de 5 mW + 5 mW) Aprox. 7 horas con pilas R6P (SR)

Aprox. 17 horas con pilas alcalinas

LR6 (SG) Sony Aprox. 95 x 205 x 110 mm (an/al/

Altavoz izquierdo: Aprox. 610 g,

excl. las pilas Altavoz derecho: Aprox. 500 g

Accesorio suministrado Adaptador de alimentación de CA

AC-S1510 (1) Accesorios opcionales

Dimensiones


Adaptador de clavija PC-236HG

Cable conector RK-G138HG

Diseño y especificaciones sujetos a cambio sin previo

Alimentación

Alimentación con la corriente de la red

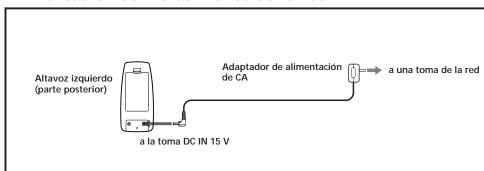

Cuandoutilice el adaptador de alimentación de CA el adaptador de enchufe del mismo no deberá estar encarado hacia abajo, ya que esto podría causar ruido en los altavoces y el cable podría dañarse. Cuando conecte el adaptador de CA al sistema, las pilas internas se desconectarán automáticamente.


Nota sobre el adaptador de alimentación de CA

Utilice solamente el adaptador de alimentación de CA suministrado. No utilice ningún otro adaptador de alimentación de CA.



Polaridad de la clavija

Reemplazo de las pilas

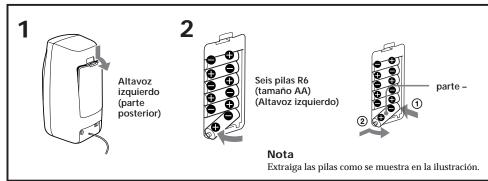

Reemplazo de las pilas

Cuando las pilas se debiliten, el indicador POWER comenzará a parpadear y se iluminará débilmente, o el sonido de reproducción se volverá distorsionado o inestable. En este caso, reemplace todas las pilas por otras nuevas.


Con respecto a la duración de las pilas, consulte "Especificaciones"

aparece distorsionada debido al magnetismo

Si esto no parece solucionar el problema, instale el sistema aleiado del aparato de TV/computadora. No mesa de TV, juguetes, etc. La distorsión de la imagen el efecto del sistema

Si tiene alguna pregunta o problema en relación con su sistema que no pueda resover este manual,

Conexión

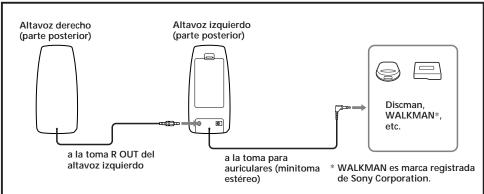


Conecte el altavoz izquierdo al equipo fuente.

Cuando conecte el sistema a una toma monoaural de una radio, etc., es posible que el sonido salga solamente a través del altavoz izquierdo. En tal caso, utilice un adaptador de clavija PC-236HG Sony opcional. El sonido saldrá a través de ambo altavoces.

Conexión a una toma para auriculares telefónica estéreo

Emplee o un cable conector RK-G138HG opcional.

Forma de empleo

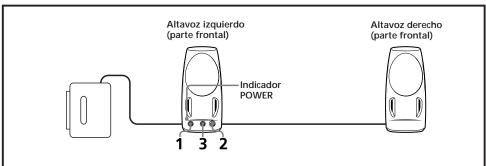

- Presione el interruptor POWER (... ON). El indicador de alimentación (POWER) se encenderá.
- Ajuste el control VOLUME.
- Para obtener efecto perimétrico, presione la tecla SURROUND (_ ON). Como este sistema posee un circuito MEGA BASS interno, desactive la función MEGA BASS (WALKMAN, Discman, etc.), porque podría causar la distorsión del sonido

Después de la escucha, ponga el interruptor POWER

El indicador de alimentación (POWER) se apagará.